

HOW TO INSTALL A PANADERO STOVE


1°.- Chimney cap above the roof ridge

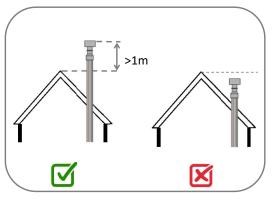


2°.- Chimney cap above the highest part of the roof ridge but with a taller building close

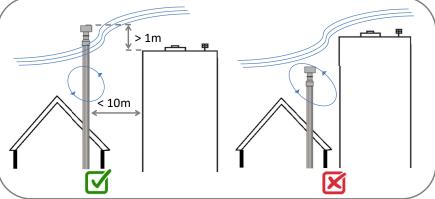


3° .- Chimney cap installed at the end of the smoke outlet

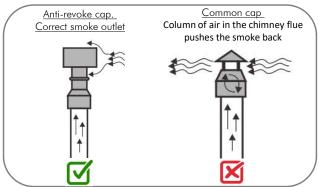


4°.- Installation in mansonry chimney, chimney flue up to the exterior.

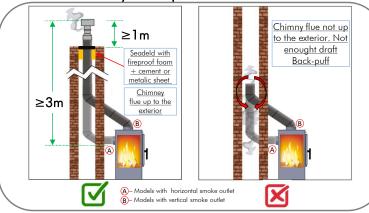


5°.- Soot buildup because of an horizontal section

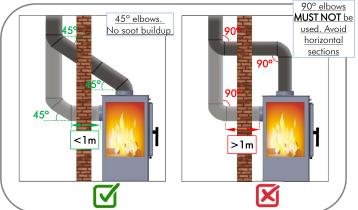


6°. – Joint in tube connection

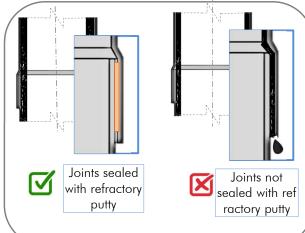


7°.- External air intake installation

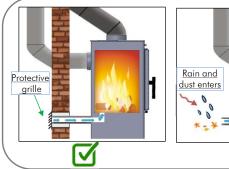

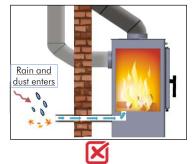

External air intake vents air into the combustion chamber. This is mandatory to use in buildings that are very airtight (buildings with non-closable vents). If externail air intake cannot be used then there must be an space of at leat 10 cm between the stove and the rear wall so the appliance functions correctly.

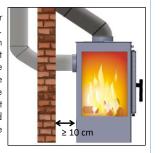

8°.- Installation in community systems

